



Tastenschalter LF Vorverdrahtung

Platte 10	
01	2 brbl
02	rtbl
03	bl
04	2 gesw
05	sw
06	2 bl
07	rs
08	rt

Platte 1	
101	3 gr
102	7 gn
103	brbl
104	br
105	7 gn
106	5 gr
107	4 gn
108	3 ge
109	5 gn
110	4 ge
111	gn
112	sw
113	6 gn
114	5 ge
115	rt
116	
117	
118	
119	
120	
121	
122	

Platte 12	
020	2 brbl
021	rt
022	
023	

Platte 2	
015	010 2 rtbl
016	011 2 brbl
017	012 3 bl
018	013 rtbl
019	014 5 bl
020	

Platte 2	
II	3 bl
II	8 gn
I	6 ge
I	rs
I	6 ge
I	4 bl
II	8 gn
II	7 gr
I	5 bl
I	rtbl
I	rt

Platte 2	
201	sw
202	ge
203	2 gr
204	rt